



USER MANUAL

SMART BRACELET

Downloading the App


Scan the following QR code, download and install the App.



Scan QR Code and Download

Charging and Active

Charging the device to active before the first time using;
To charge your device, plug the charging cable into the
adapter or USB port on your computer.

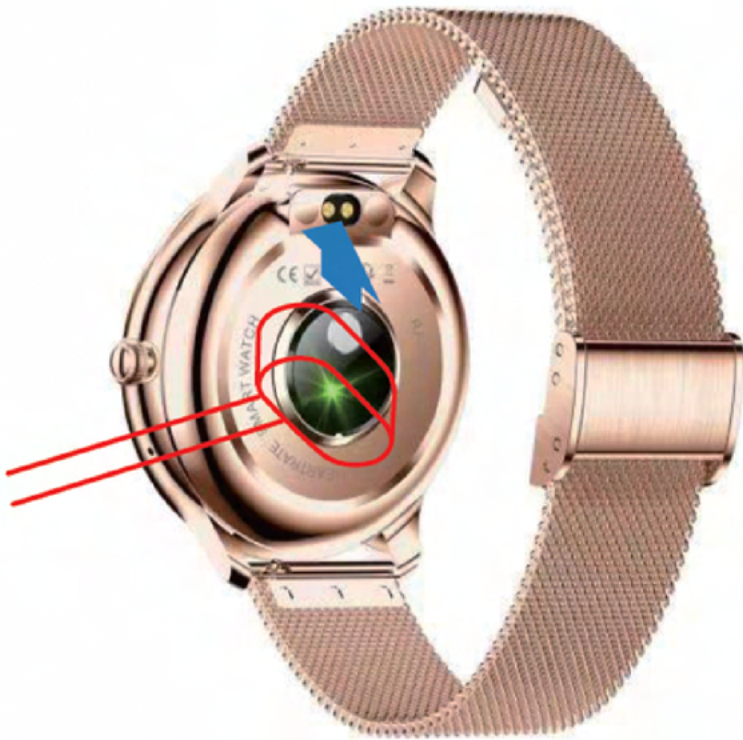

Pairing

Open the App and set up your profile



Go to the 「Device」 , Click 「Add a Device」



Choose your device on the scanning list



Finish

The MAC address on the “Setting”-“About” page could help you identify your device on the scanning list.

Use the Touch Screen



Control Center

Swipe Down   Swipe Up

Swipe Left



Swipe Right




Menue




Swipe Down   Swipe Up

Swipe Left



Swipe Right

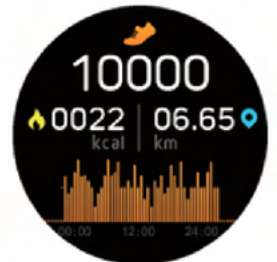


Feature pages



Messages

Smart Watch Features

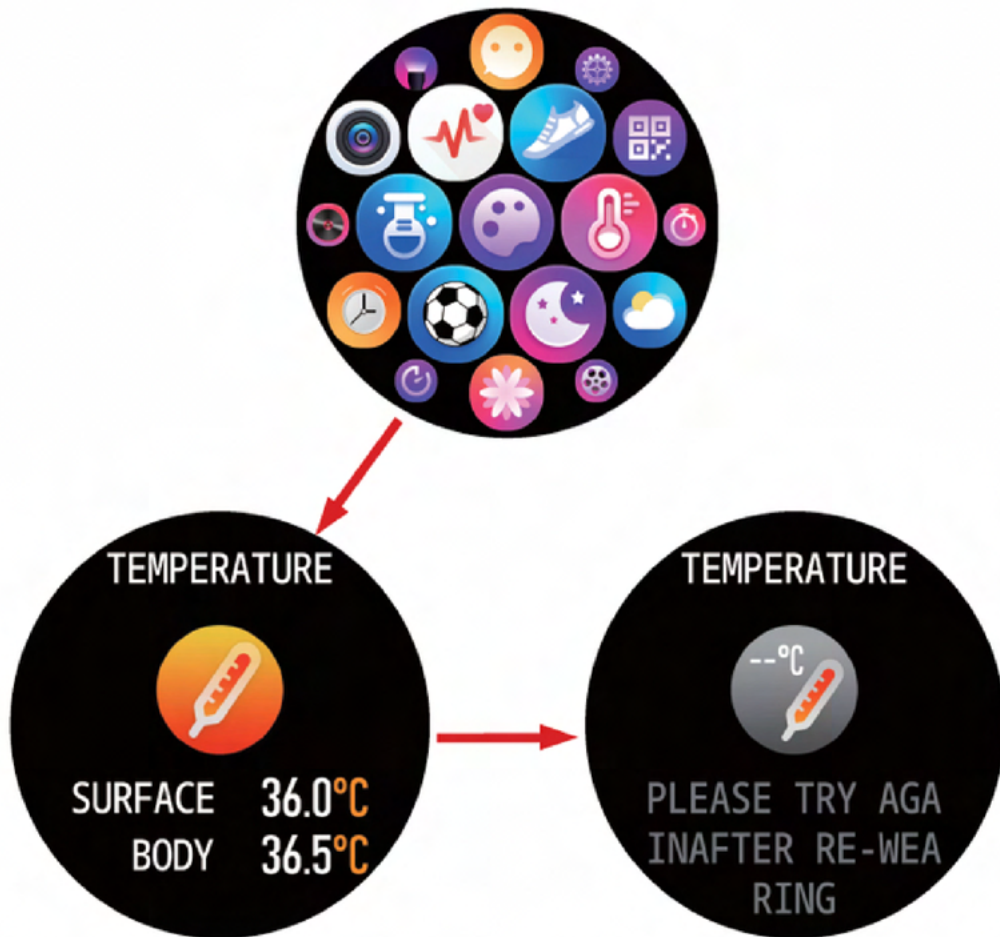

Enter body temperature mode and wear a bracelet
Close to the skin for testing
The temperature was measured every day

Smart Watch Features



When the watch is connected to the mobile phone, you can dial the watch to control the mobile phone to make a call; You can also answer calls from mobile phones on your watch. At the same time, you can also check the call record information on your watch. When using the call function, when using the call function, Make sure the connection state between the watch and the mobile phone is stable.

Smart Watch Features



Sleep

If you keep wearing Smart Watch in your sleep, it can provide the hours slept and quality of sleep stats on both the screen and the APP.

NOTE: Sleep stats reset to zero at 8:00 pm.



Heart Rate Test

The Smart Watch could record your heart rate all day.

You also could tap on the page to start measuring heart rate.



Sports

Smart Watch automatically tracks Steps taken on the screen.

NOTE: Your movement stats reset to zero at midnight.



Training

Tap the training icon on the menu to start a new training measure recording, there are 8 sport modes to be chosen. The last training recording will be shown on the training page.

Smart Watch Features



Weather

It could show the weather info of current and tomorrow on the weather page.

Weather info is synced after connecting with the APP, it will not be updated after a long disconnected.



SpO2 Test

Tap the SpO2 page to start measuring your SpO2.

On the SpO2 page, It can show the SpO2 measured data of the last times.



Messages Reminder

The device can sync incoming notifications from Twitter, Facebook, Whatsapp, Instagram etc.

Recently 5 messages can be stored.

Note: You can switch of/off the incoming notification in the APP.



Remote Shutter

After connecting the device, you can remote control the camera on your phone.

Smart Watch Features



Other Features

Other features include mute on/off, brightness, about, factory reset and power off.



Player

After connecting the device, you can remote control the music player on your phone.



Stop Watch

Tap the start button on stopwatch page to start timing, and tap the stop button to stop timing.



Silent Alarms

Set up the alarm on the APP, the device will vibrate to remind on time.

Smart Watch Features



MOVE

Remind to Move

The device will vibrate to remind you to make a relax after 1 hour sitting.

Note: You can switch on/off the feature in the APP.



Turn on mute
mode reduce the
brightness

Theater Mode

The device will turn off the vibration and trun down the brightness when the theater mode is truned on.

Note: You can trun on/off the theater mode in the control center.



TIME TO DRINK
SOME WATER

Remind to Drink

The smart watch will remind you "Time to Drink Some Water" at the planned drinking time.

Note: You can set the feature in tht APP.

Getting to Know Your Device

Using Quick View

With Quick View you can check the time or the message from your phone on your Smart Bracelet without tapping. Just turn your wrist towards you and the time screen will appear for a few seconds.

General Info & Specifications

1.Environmental Conditions

Operating temperature: 14°F to 122°F (-10°C to 50°C)

Non-operating temperature: -4°F to 140°F (-20°C to 60°C)

2.Size

Fits a wrist between 5.5 and 7.7 inches in circumference.

3.Disposal and Recycling

Please kindly be aware that it is the consumer's responsibility to properly dispose and recycle Smart Bracelet and accompanying components. Do not dispose of Smart Bracelet with common household waste, the Smart Bracelet unit is considered electronic waste and should be disposed of at your local electronic equipment collection facility.

For more information, please contact your local electronic equipment waste management authority or the retailer where you bought the product.